

Wiring Instructions in thermostat manual (Use Connections 1 & 3 or 1 & 5)

Power Supply

Battery Operated Programmable Digital Stat  
Only 2 Core Wire Needed (24v or 220v)

