




1. Cut the pipe orthogonally to the axis.



2. Gauge and trim the pipe, completely removing the plastic material chips.

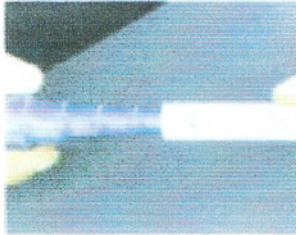

3. Insert the fitting in the pipe up to stop (the O-Rings SHOULD NOT be greased).



4. Put the pressing tong on the junction ring.



5. Push the starting lever until the tool automatically stops.



ATTENTION:
The fitting should be correctly placed in the pressing tong; the O-Ring has a suitable physical reference that "forces" this positioning.